

Headlight Only On When eGO Cycle Is Plugged Into Wall

If the headlight only turns on when the eGO Cycle is plugged into the wall to recharge the battery pack then the 12A fuse that the red arrow points to in the wiring diagram below is usually blown out. When this fuse is blown out the headlight will not come on unless the scooter is plugged into the wall and the battery charger will not recharge the battery pack.

